## **LightRail 5.0 Fore and Aft Cross Bar Mounting Kit**

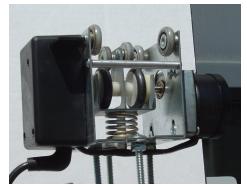


Diagram 1

Step One: Install the enclosed ¼" carriage screws in the 2 square holes on the bottom of the Drive Unit as in Diagram 1 (Close Up Diagram 1-A). Secure them with the flat washer, star washer and ¼" nut.



Diagram 1-A

**Step Two:** Install the Cross Bar as in Diagram 2. Secure it using the two ½" wing nuts included with your LightRail 5.0.



Diagram 2